


Sticklers™ CleanStixx™ - 1.2 mm EB Connector Cleaning Sticks

Product Features:

- Saddle shaped cleaning tip conforms to lens and ferrule end face for full contact
- Prevents triboelectric and electrostatic induction when used with the Sticklers Fiber Optic Splice & Connector Cleaner precision cleaning fluid
- 50 CLEANSTIXX connector cleaning sticks in a box
- 5 Sealed Sleeves with 10 sticks per sleeve to maintain cleanliness
- Lot number listed on each sleeve for quality

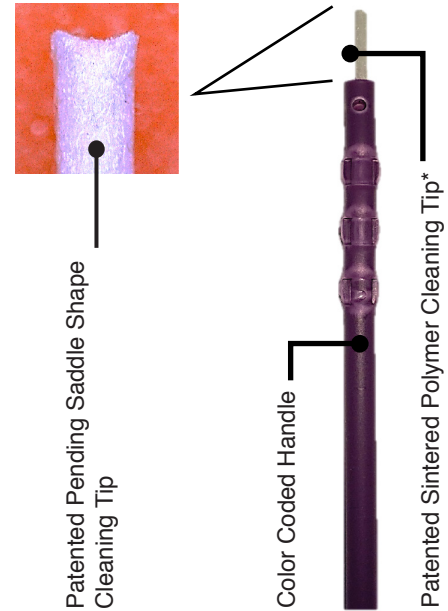


Recommended Uses:

Connector Systems:	<ul style="list-style-type: none"> • Ø1.2mm Expanded Beam MIL 29504/5 Socket Termini • ARINC 801 Socket Termini • SFP+ optical transceiver modules • ODC/RDC/AARC style FTTA connectors • In Bulk Head LC and MU connectors
Typical Applications:	<ul style="list-style-type: none"> • Commercial Aviation • Military Aviation • Fiber To The Antenna • Enterprise Networks • Equipment Production • Installation Kits

A Capillary Action:

The capillary force applied during the rotation of the cleaning tip causes residues and liquids to wick into the strands of the cleaning tip.

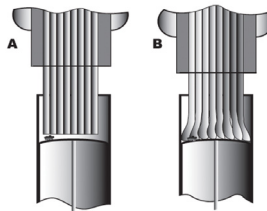


B Radial Spread:


Cleaning strands spread uniformly across the end face surface during the rotation sweeping up dust and particulates residing on the end face.

For Best Results:

- Use with Fiber Optic Splice and Connector Cleaner
- Tilt can and use light pressure to engage cleaning fluid pump
- Do not over saturate the cleaning stick

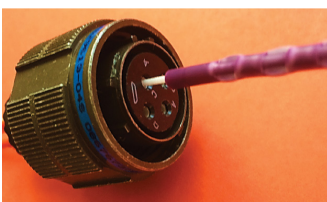

MIL 29504/5

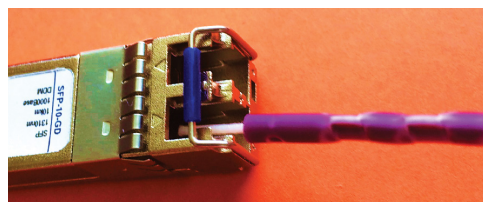

SFP+ Transceiver Module

When you need perfectly clean splices & connectors™

www.SticklersCleaners.com



MicroCare Corporation

595 John Downey Drive
New Britain, CT 06051 USA
CAGE: OATV9
Tel: +1 860 827 0626
Toll Free: 1 800 638 0125
Email: TechSupport@MicroCare.com
www.MicroCare.com

MicroCare Europe Bvba

Vekestraat 29 B11
Industriezone 't Sas
1910 Kampenhout, Belgium
Tel: +32 2 251 95 05
Fax: +32 2 400 96 39
Email: EuroSales@MicroCare.com

MicroCare Asia Pte Ltd

102E Pasir Panjang Road
#03-01 CitiLink Warehouse Complex
Singapore 118529
Tel: +65 6271 0182
Email: TechSupport@MicroCare.sg